



Bu 2028	2001 02
Masse	1001, 4001, 5001, 6001, 7001
Empf. Ausgang	1002, 2002, 3002, 4002
+280Vstab	5005
+210Vstab	5008
+70V	5009, 1009
+210V	1011, 1010, 2010, 2012
+60V	1011, 4011, 5011, 7011
126Vsym	4013, 5015, 7030
	1014, 3016, 7031
	1517
126V-	5018
	1919
220V-	5003
	5004

Bu 2001	2089/04
2001	2081, 201400, 2075, 2081, 401, 21, 01
02	C28, C29, 2302, 2202
03	2325
04	W05
05	W05
06	W05
07	2301
08	2323
09	2092, 2079
10	2092, 2079
11	2102, 2221, 2321
12	2115, 2222, 2322
13	2102, 2221, 2321
14	2115, 2222, 2322
15	2102, 2221, 2321
16	2115, 2222, 2322
17	2102, 2221, 2321
18	2115, 2222, 2322
19	2102, 2221, 2321
20	2115, 2222, 2322
21	2102, 2221, 2321
22	2115, 2222, 2322

Bu 2029	2023 24
2023	24
25	26
26	26
27	28
28	28
29	30
30	30
31	32
32	4068, 7050
33	4070, 7049
34	4072
35	4075, 7043
36	4077
37	4075, 7043
38	4077
39	4075
40	4077
41	4067
42	4077
43	4077
44	4079

Bu 2015	C2023
C2023	C24
C25	C26
C27	C28
C29	C30
C31	C31
C32	C33
C33	C34
C34	C36
C35	C37
C36	C38
C37	C39
C38	C40
C39	C41
C40	C42
C41	C43
C42	C44

Anlage 2 Stromlaufplan des Empfängers