



Bu 2028	
Masse	1001, 4001, 5001, 6001, 7001, 2001, 02
Empf. Ausgang	1002, 2002, 3002, 4002, 5002, 6002, 7002, 01
+280Vstab	5005
+210Vstab	5008
+70V	5009, 1009
+210V	1011, 1010, 2011, 2010, 09
+60V	1011, 4011, 5011, 7011, 11
126Vsym	4013, 5013, 7030
	1014, 3016, 7031, 13
	1517, 1617, 1717, 1817, 1917, 2017, 2117, 2217
126V-	5017
	5018
220V-	5003
	5004

Bu 2001	
2001	2081, 2011, 2001, 2075, 2081, 2011, 2101
02	C28, C29, 2302, 2202
04	2325
05	W05
07	2301
08	2323
10	2092, 2079
11	2102, 2221, 2321
12	2116, 2222, 2322
13	
15	
16	B 2004
17	B 2005
18	W19, W06
19	
20	
21	
22	U0701, 2045

Bu 2029	
2023	24
25	26
27	28
29	30
31	30
32	4068, 7050 Richtungs Lampe
33	4070, 7049 Richtungs Lampe
35	24
36	24
37	4076, 7043 Wellenmesser-Empf. Anzeige
38	4072 Scharfabstimm Relais
39	4075 Lampe Autom. Empf.
41	4067 Rauschbrücken Relais
43	4077
44	2079 Wendekontakt

Bu 2015	
C2023	
C25	
C26	
C27	
C28	
C29	
C30	
C31	
C32	
C33	
C34	
C35	
C36	
C37	
C38	
C39	
C40	
C41	
C42	
C43	
C44	

Anlage 2 Stromlaufplan des Empfängers