

# Empfänger






# Sender

( ) nur bei Ausf. Tfb 2

--- für Tfb1  
- - - für Tfb2

Rel.	I	II	III	Rel. Bv.
AR	+	+	+	057/70
BR	+	+	+	057/70
ER	+	+	+	1009/321
RR	+	+	+	1009/33
SpR	+	+	+	1009/321

Anlage 4  
Stromläufe

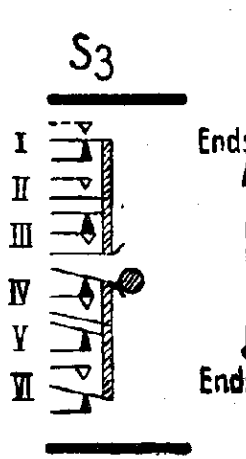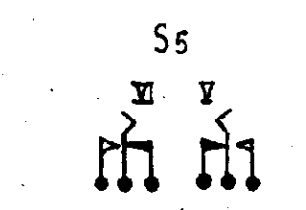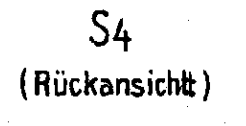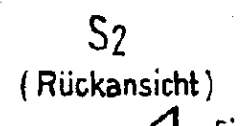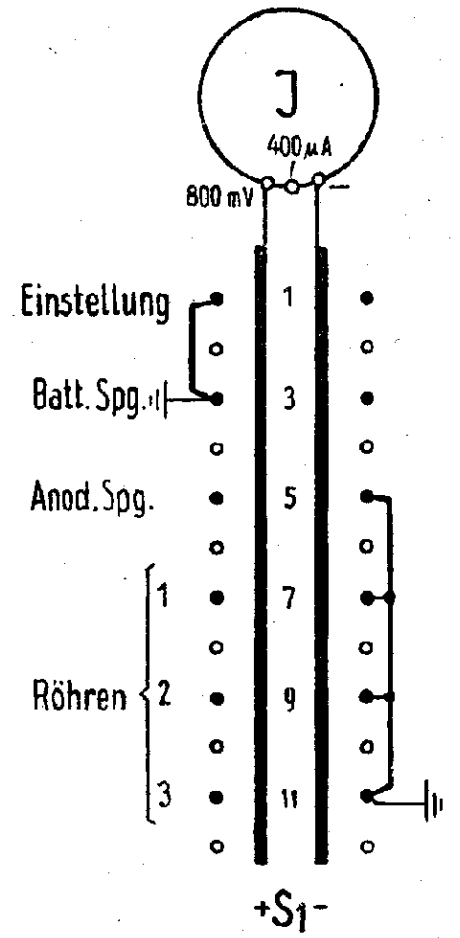

FD-Ltg. (Bronce) → FF-Kabel  
FD Ltg. (Eisen)

Prüfen